



CLIMB ON

DOUBLE RUNG LOCK ASSEMBLY REPLACEMENT

READ THESE INSTRUCTIONS COMPLETELY BEFORE YOU START. IF YOU DON'T UNDERSTAND THESE INSTRUCTIONS, PLEASE CALL 800-453-1192 FOR ASSISTANCE

Procedure for replacing the double rung lock assembly on Little Giant Ladder Systems **Extension** ladders.

1. Failure to comply with all instructions may result in serious injury.
2. Make sure this kit is compatible with your ladder. If you have any questions concerning the use of this kit on Little Giant Ladder Systems products, call 800-453-1192 for assistance.
3. Before installing this kit, identify all kit components. If any components are missing or damaged, please contact Customer Care. Do not substitute any components.
4. Inspect the ladder before installing this kit. Repair or replace any damaged or missing ladder parts before using the ladder. Use only Little Giant Ladder Systems repair or replacement parts. If you are unable to repair it, discard the ladder.

 
COMPONENTS IN KIT



LEFT OR RIGHT
RUNG LOCK



(2) SHOULDER BOLTS



(1) HEX HEAD



(4) HEX NUT



(4) WASHER

TOOLS NEEDED

3/16" PUNCH 

DRILL 

7/16" WRENCH
1/2" WRENCH
3/8" WRENCH

 


3/16" BIT 

HAMMER




CHISEL




NOTE: IF ANY OTHER PART OF THE LADDER IS DAMAGED BEFORE OR DURING THE PROCESS OF INSTALLING AND/OR REPAIRING, DISCARD THE LADDER OR CONTACT CUSTOMER CARE FOR INSTRUCTIONS.


DO NOT USE A DAMAGED LADDER!

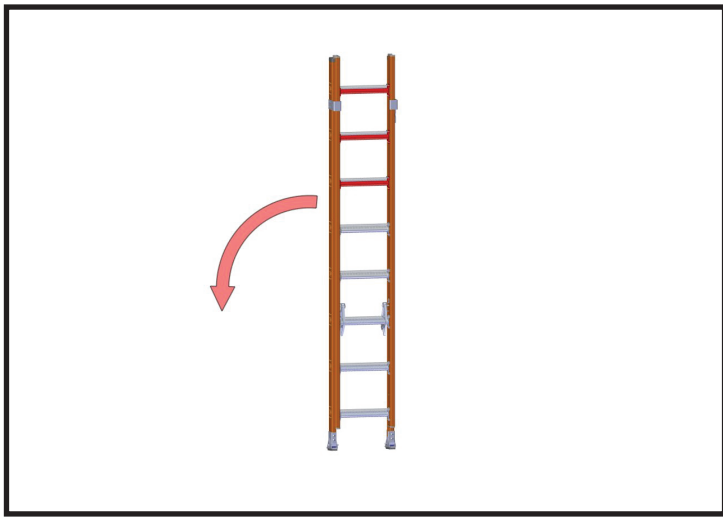


1. Lay the ladder on it's side to make steps 2-12 easier.

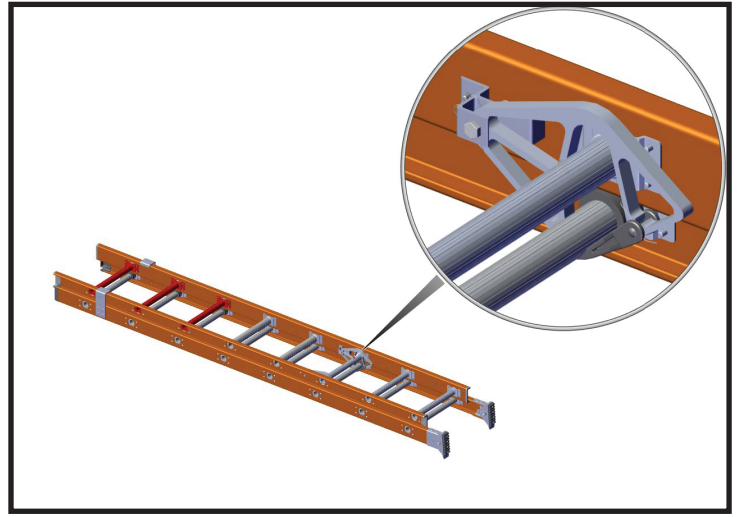


2. Identify the rung lock that needs to be replaced.

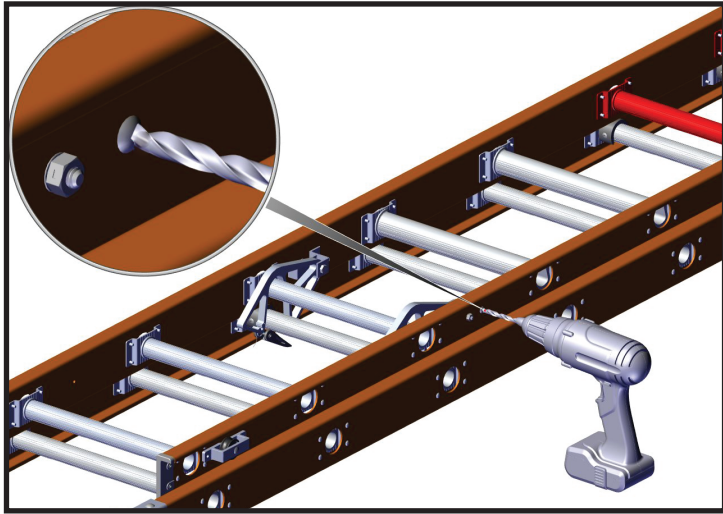


3. Using a drill with a 3/16" bit, drill completely through the head of the rivet holding the rung lock assembly in place, as shown in illustration.

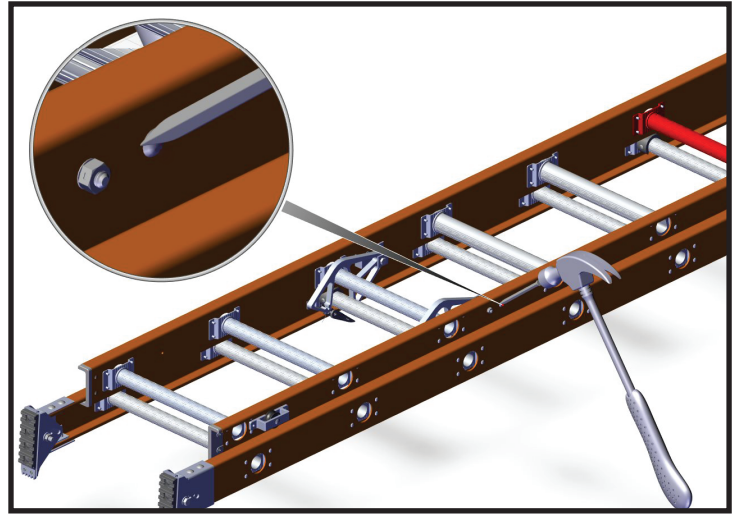


4. Using a hammer and chisel, tap off the rivet head.

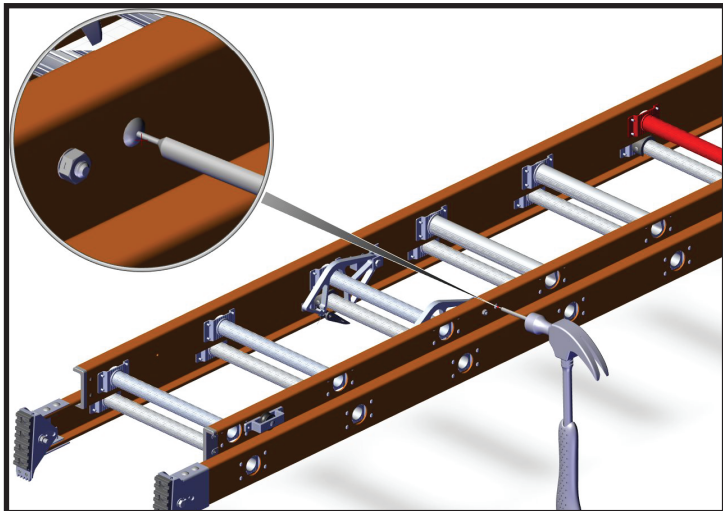


5. Using a hammer and 3/16" punch, completely remove the remaining rivet.

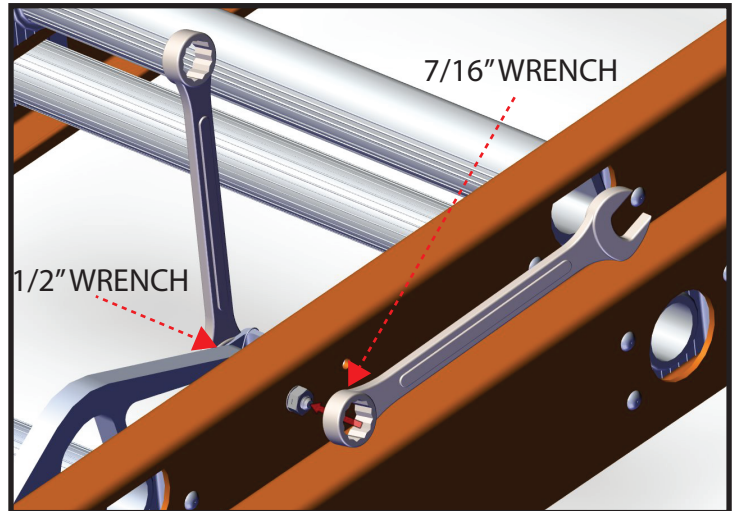


6. Using a 1/2" and a 7/16" wrench, loosen the lock nuts, washers and bolts.

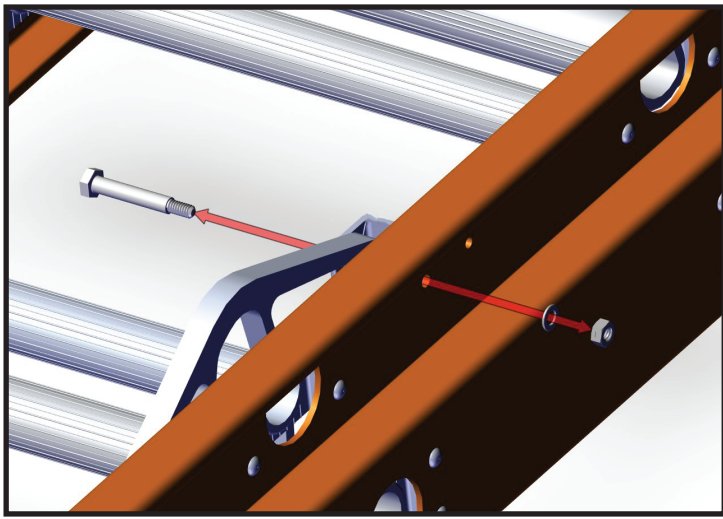


7. Completely remove the lock nut, washer and shoulder bolt, then discard.

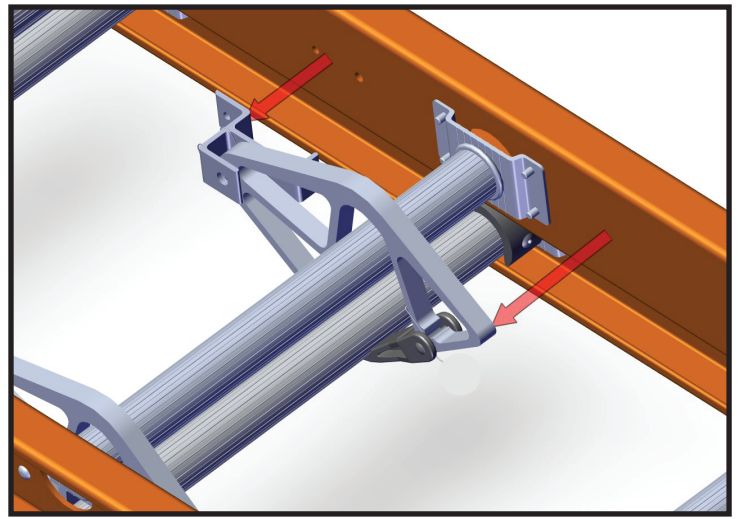


8. Remove the rung lock.

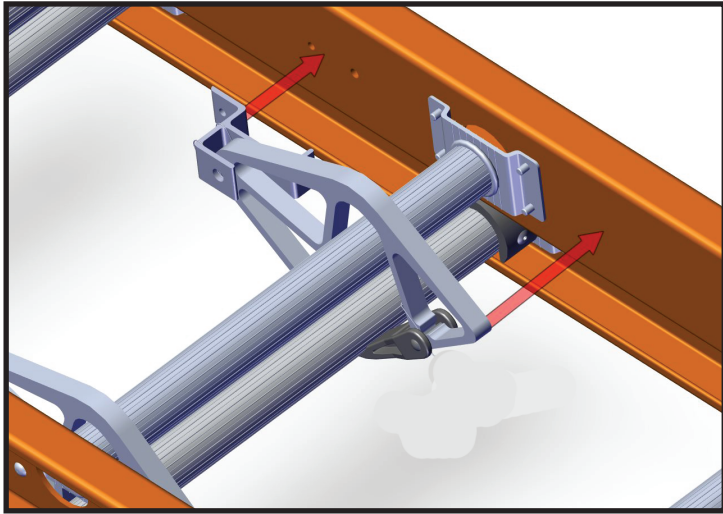


9. Replace with new rung lock.

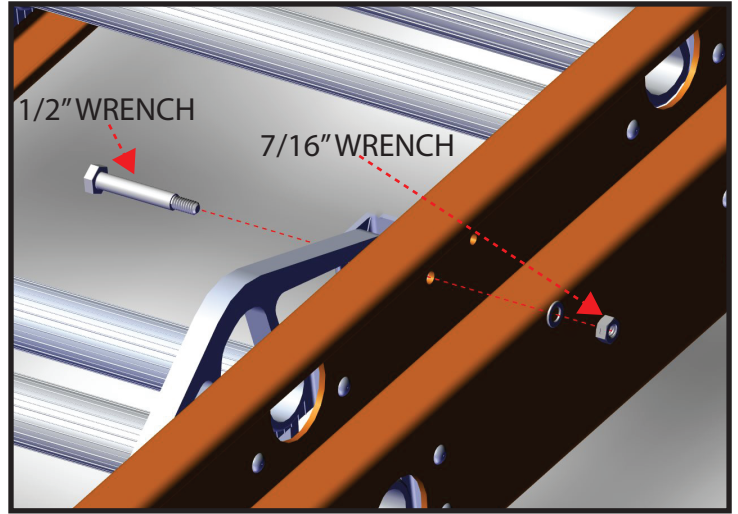

10. Insert (new) shoulder bolt, washer and lock nut. Using a 1/2" and a 7/16" wrench, tighten the nuts and bolts into place.

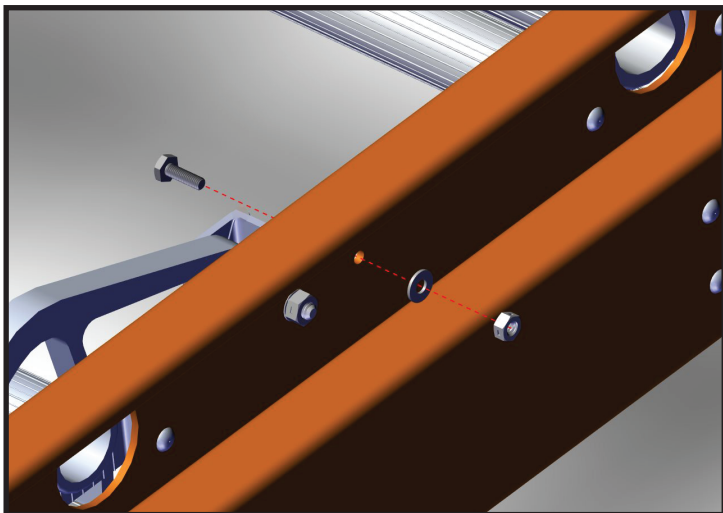

11. Insert new lock nuts, washers and bolts that are included in kit. (As shown in the illustration).

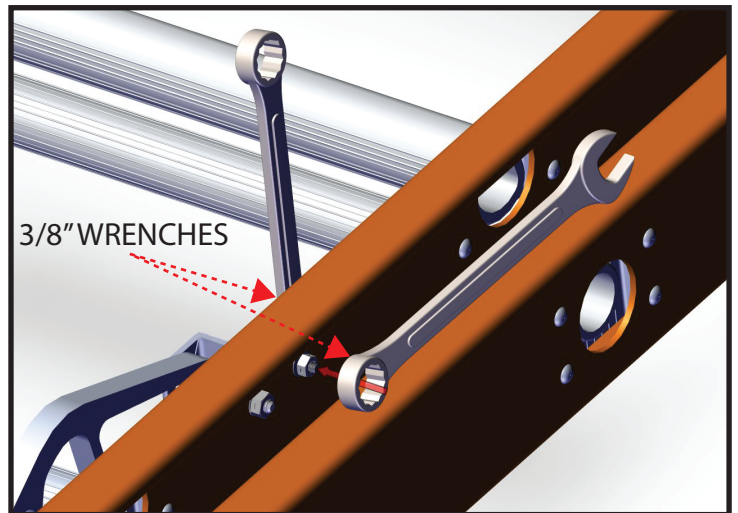

12. Using (2) 3/8" wrenches, tighten the nuts and bolts into place.



13. Stand the ladder back up and make sure that rung locks function properly before use.