

ROCK LOCK INNER ASSEMBLY REPLACEMENT

READ THESE INSTRUCTIONS COMPLETELY BEFORE YOU START. IF YOU DON'T UNDERSTAND THESE INSTRUCTIONS, PLEASE CALL 800-453-1192 FOR ASSISTANCE


- 1. Failure to comply with all instructions may result in serious injury.
- 2. Make sure this kit is compatible with your ladder. Before installing this kit, identify all kit components. If any components are missing, damaged or if you have any questions concerning the use of this kit on Little Giant Ladder Systems® products, please contact our Customer Experience Team at 800-453-1192. Do not substitute any components.
- 3. Inspect the ladder before installing this kit. Repair or replace any damaged or missing parts before using the ladder. Use only Little Giant Ladder Systems® replacement parts. If you are unable to repair it, discard the ladder.


COMPONENTS INCLUDED




NOTE: IF ANY OTHER PART OF THE LADDER IS DAMAGED BEFORE OR DURING THE PROCESS OF INSTALLING AND/OR REPAIRING, Please contact our customer experience team for assistance at 800-453-1192.

DO NOT USE A DAMAGED LADDER!

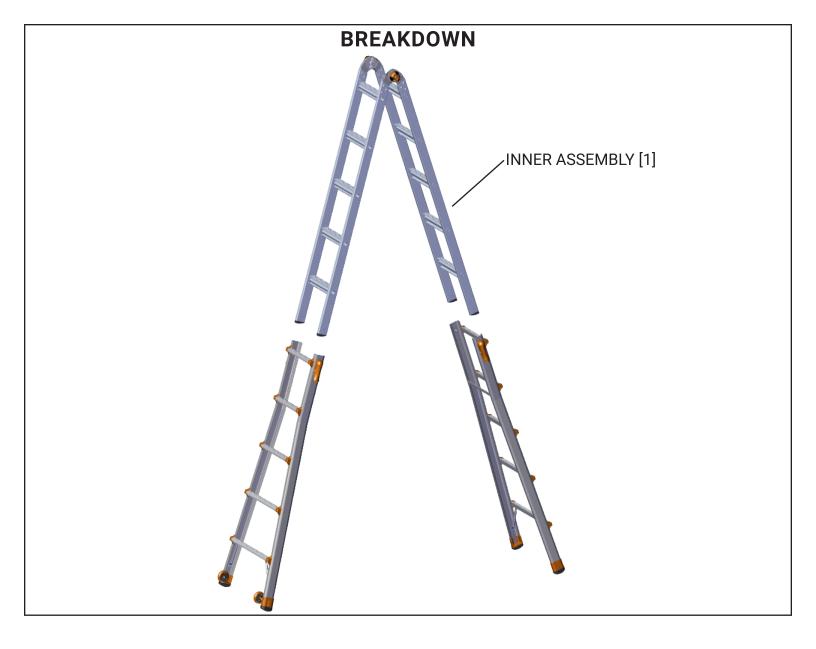

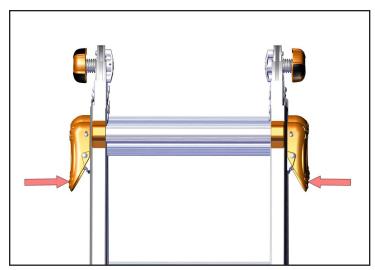

1. Push down to dis-engage Rock Locks.

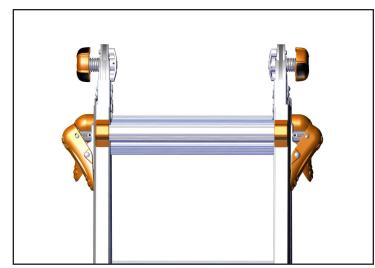


2. When pushed down, the Rock Lock tabs will release the outer assembly from the inner assembly.




3. Remove the outer assembly.




5. Re-insert the new inner assembly

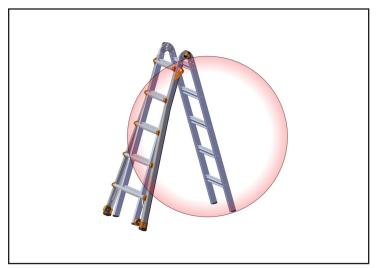

7. Repeat steps 5-6 on opposite side. Once completely replaced, stand the ladder up and make sure that it is stable before use.

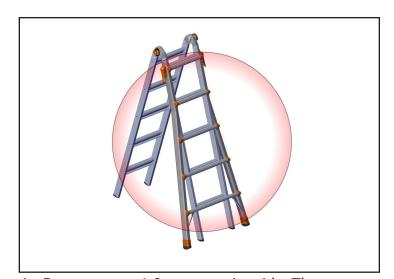

4. Repeat steps 1-3 on opposite side. Then discard old inner assembly.

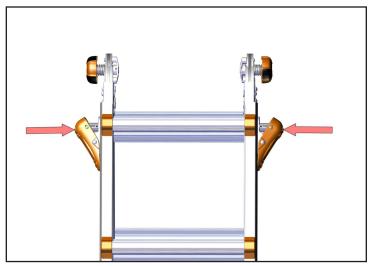

6. Re-engage Rock Lock tabs to lock the outer assembly to the inner assembly

Little Giant Ladder Systems, LLC 1198 North Spring Creek Place Springville, UT, 84663, USA Toll Free: 800-453-1192 Phone: 801-489-3684 Fax: 801-489-3685

www.LittleGiantLadders.com