



CLIMB ON

AIRDECK® BUTTON REPLACEMENT

READ THESE INSTRUCTIONS COMPLETELY BEFORE YOU START. IF YOU DON'T UNDERSTAND THESE INSTRUCTIONS, PLEASE CALL 800-453-1192 FOR ASSISTANCE

Procedure for replacing the Buttons on Little Giant Ladder Systems **AIRDECK®**.

1. Failure to comply with all instructions may result in serious injury.
2. Make sure this kit is compatible with your accessory. Before installing this kit, identify all kit components. If any components are missing, damaged or if you have any questions concerning the use of this kit on Little Giant Ladder Systems products, please contact our Customer Experience Team at 800-453-1192. Do not substitute any components.
3. Inspect the accessory before installing this kit. Repair or replace any damaged or missing parts before using the accessory. Use only Little Giant Ladder Systems repair or replacement parts. If you are unable to repair it, discard the accessory.

COMPONENTS IN KIT




(2) BUTTONS



(2) SPRINGS

TOOLS NEEDED

1/8" FLAT HEAD
SCREWDRIVER

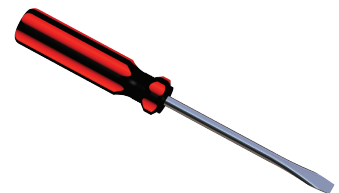

NOTE: IF ANY OTHER PART OF THE ACCESSORY IS DAMAGED BEFORE OR DURING THE PROCESS OF INSTALLING AND/OR REPAIRING, PLEASE CONTACT OUR CUSTOMER EXPERIENCE TEAM FOR ASSISTANCE AT 800-453-1192.

DO NOT USE A DAMAGED ACCESSORY!



1. Lay the AIRDECK down with the buttons facing up.



2. Prying from the side, remove the old button with a 1/8" flat head screwdriver, then discard button and spring. Be careful not to damage the slide with the screwdriver.



3. Place new spring on the center of the slide, then align and push in new button until tabs click into place.



4. Repeat steps 2 and 3 for opposite button.



5. Confirm AIRDECK is locking and unlocking properly before use.