

Little Giant[®]

Ladder Systems

PICK FEET REPLACEMENT, AIRCRAFT SUPPORT

READ THESE INSTRUCTIONS COMPLETELY BEFORE YOU START. IF YOU DON'T UNDERSTAND THESE INSTRUCTIONS, PLEASE CALL 800-453-1192 FOR ASSISTANCE

1. Failure to comply with all instructions may result in serious injury.
2. Make sure this kit is compatible with your ladder. Before installing this kit, identify all kit components. If any components are missing, damaged or if you have any questions concerning the use of this kit on Little Giant Ladder Systems[®] products, please contact our Customer Experience Team at 800-453-1192. Do not substitute any components.
3. Inspect the ladder before installing this kit. Repair or replace any damaged or missing parts before using the ladder. Use only Little Giant Ladder Systems[®] replacement parts. If you are unable to repair it, discard the ladder.

COMPONENTS



20421: OUTER PICK FEET [4]



50129: POP RIVETS [16]



50410: HEX HEAD BOLTS [4]



50412: CENTER LOCK NUT [4]



50411: WASHERS [8]



20436: PICK FOOT SPACER [4]

TOOLS



RIVET GUN



HAMMER



1/2" WRENCH [2]



CHISEL





3/16" PUNCH


NOTE: IF ANY OTHER PART OF THE LADDER IS DAMAGED BEFORE OR during THE PROCESS OF INSTALLING AND/OR REPAIRING, Please contact our customer experience team for assistance at 800-453-1192.
DO NOT USE A DAMAGED LADDER!

BREAKDOWN


*REFLECTS ONE FOOT BREAKDOWN

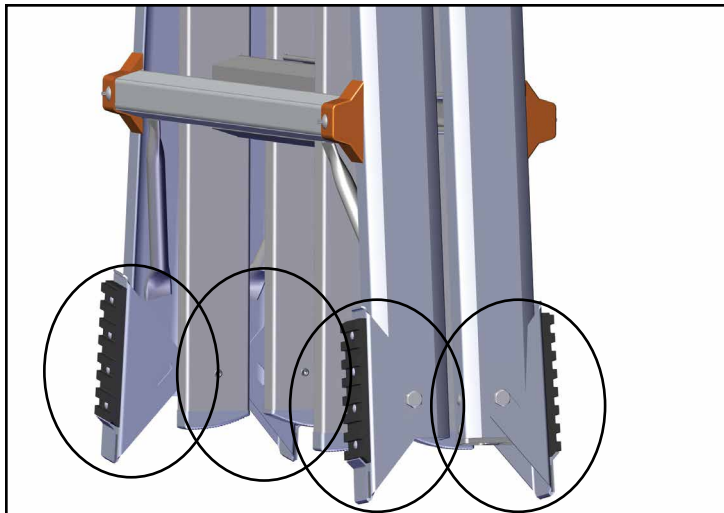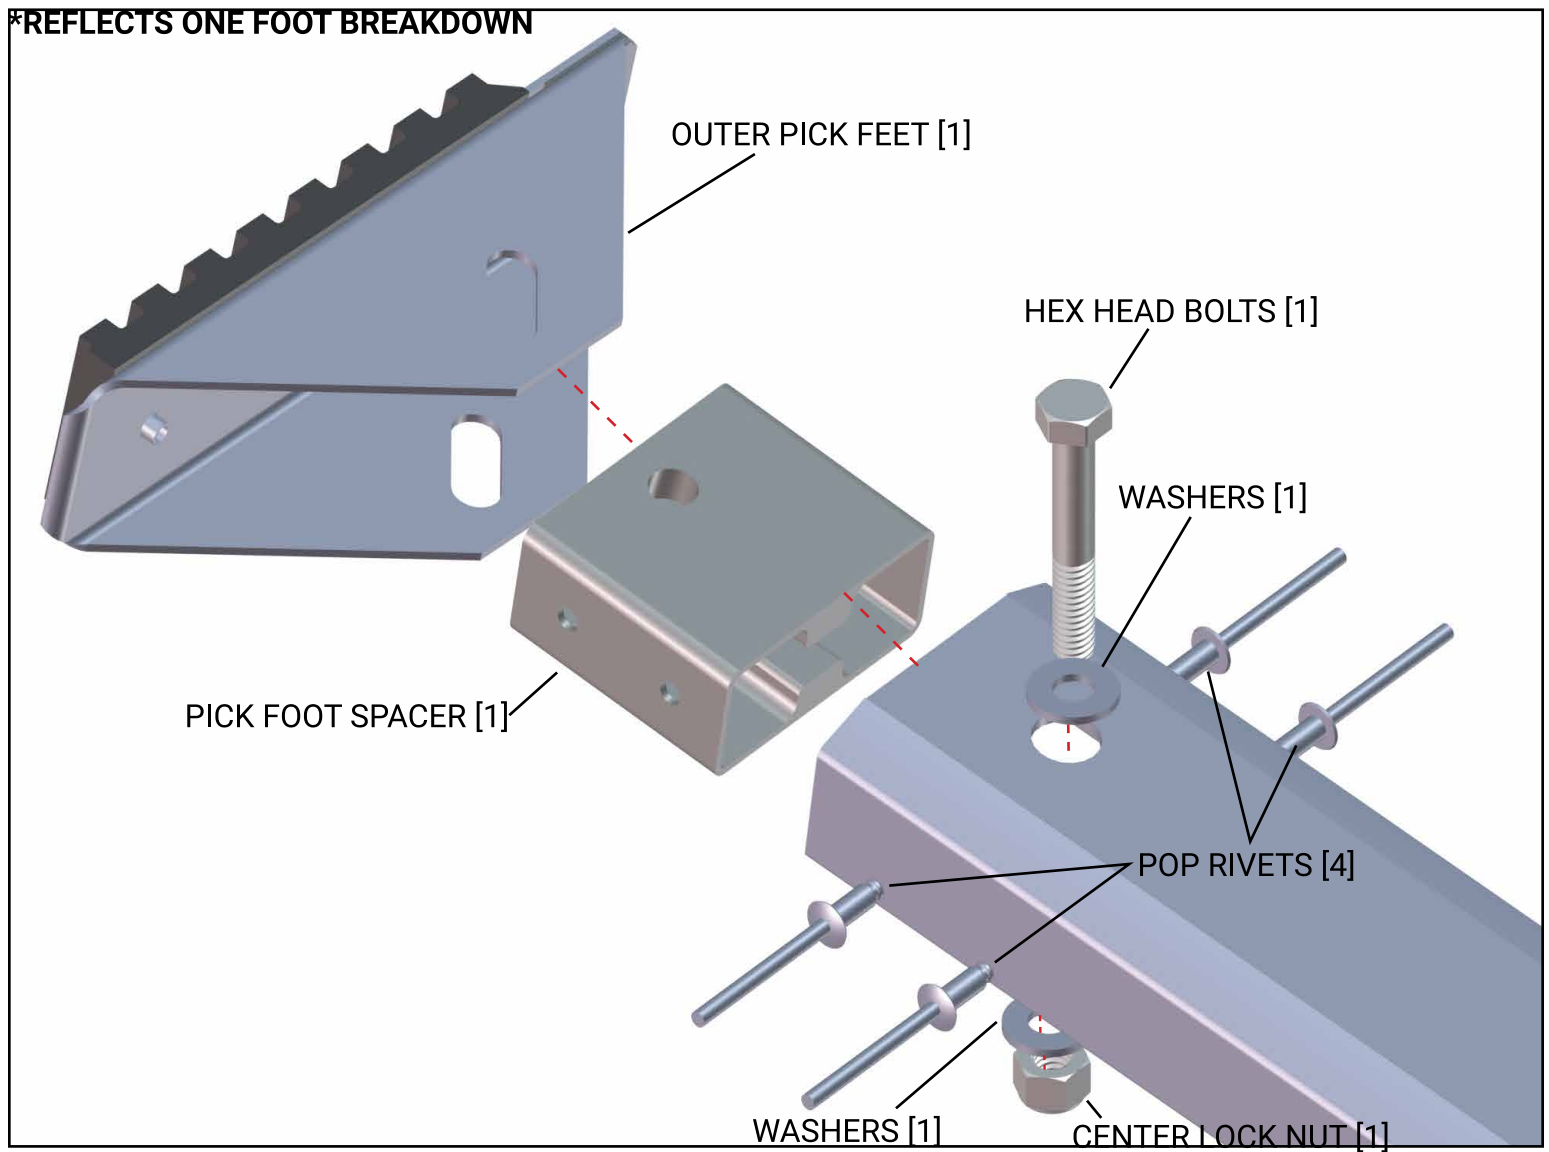


1. Identify four pick feet.

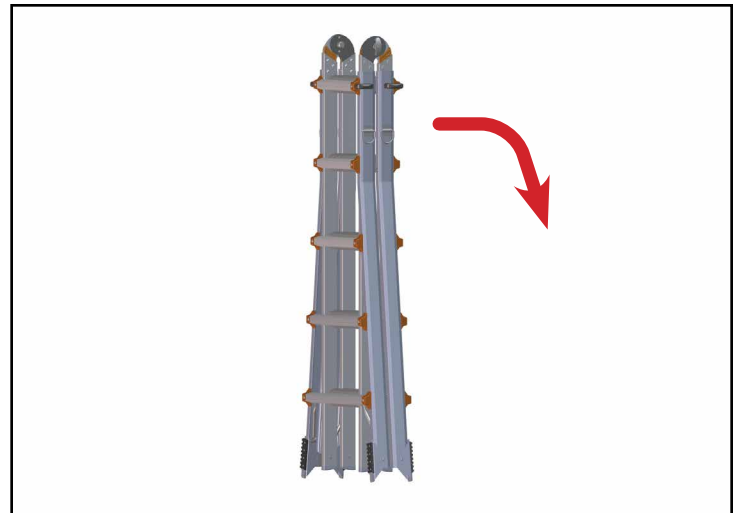


2. Lay ladder on side.

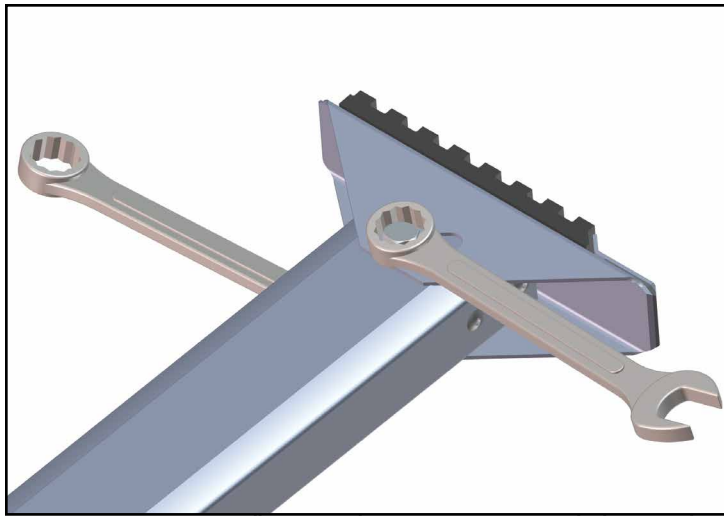


3. Using two 1 1/2" wrenches remove and discard the existing nut and bolt. Then remove the pick foot.

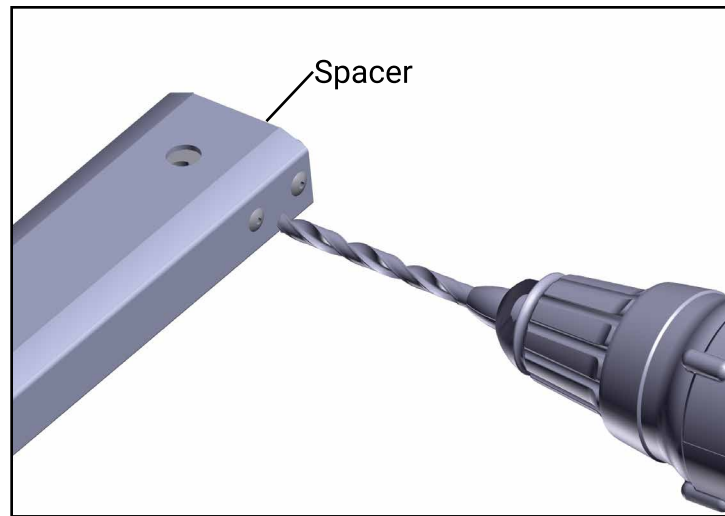


4. Using a 3/16" drill bit and a drill, remove the rivets securing the spacer. Use a hammer and punch as necessary to remove the shank of the rivets.

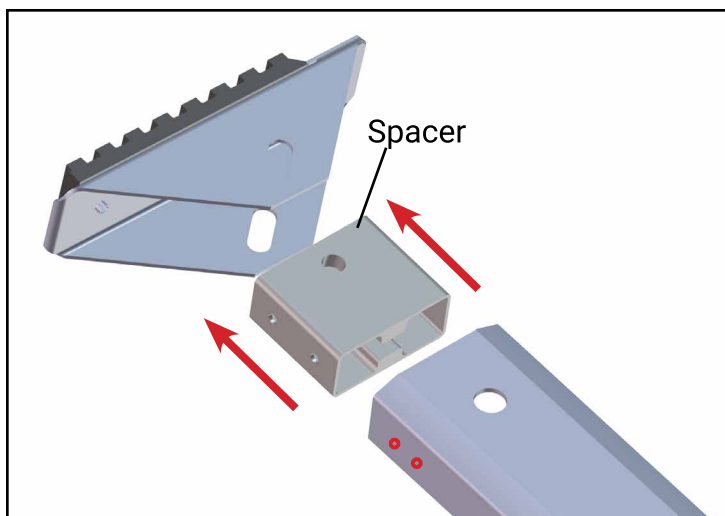


5. After removing the rivets, remove and discard the spacer.

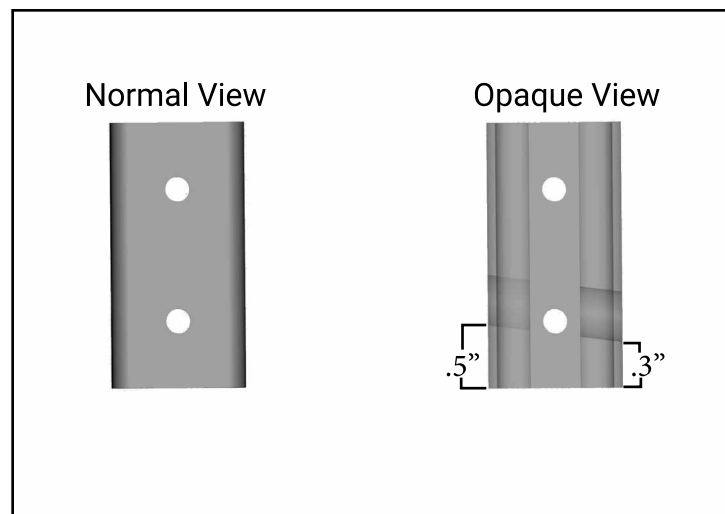


6. On one side of the spacer you have a .5" gap from the bottom to the hole, and on the other side you have a .3" gap.

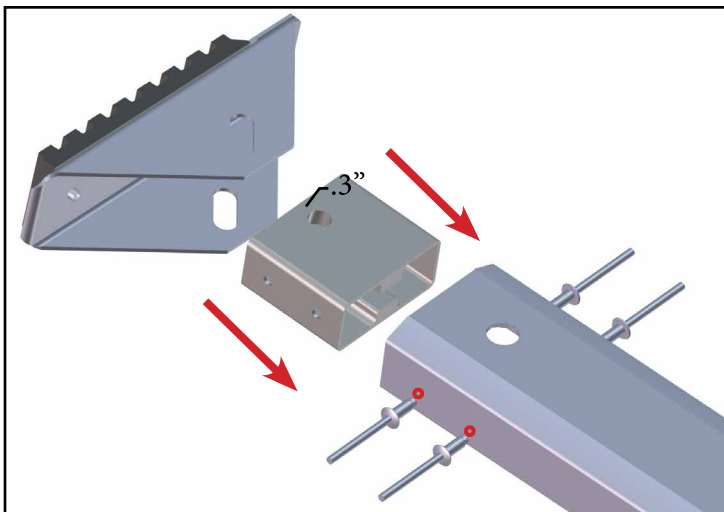

6. Insert the new spacer and secure with 4 (P/N 50129) rivets and a rivet gun.

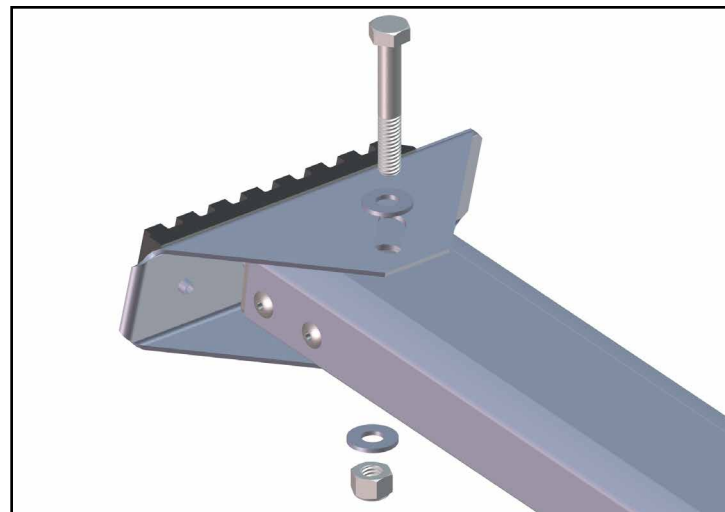

7. Once the new spacer has been secured, replace the new foot and secure with a bolt (P/N 50410), 2 washers (P/N 50411) and one nut (P/N 50412).

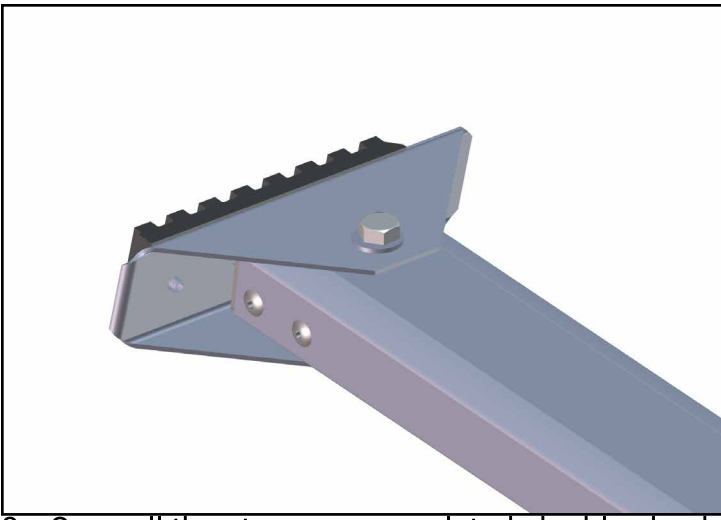

8. Once all the steps are completed, double check that the new foot is secured properly and repeat steps 3-8 on remaining feet.