



CONQUEST ALL-TERRAIN™ OUTRIGGER OPERATION AND MAINTENANCE

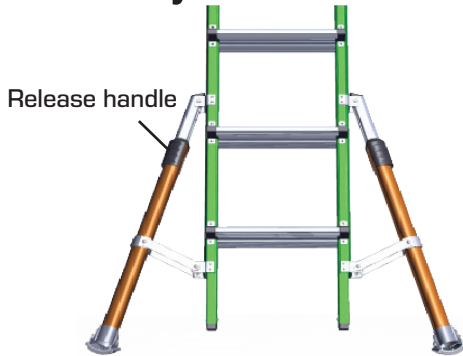


Standard on **CONQUEST ALL-TERRAIN™** models, the outriggers provide additional width at the base of the ladder for added stability, and function as built-in levelers, allowing the ladder to be used safely in unlevel areas. The outriggers have a pressure sensitive safety mechanism, which doesn't allow them to be released if someone is on the ladder.

Outrigger Operation:

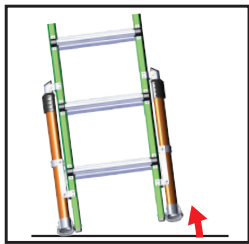


1. To unlock, lift or tilt the ladder slightly to remove any pressure on the foot of the side you're adjusting.

**NEVER USE
LADDER WITHOUT
OUTRIGGERS DEPLOYED.**

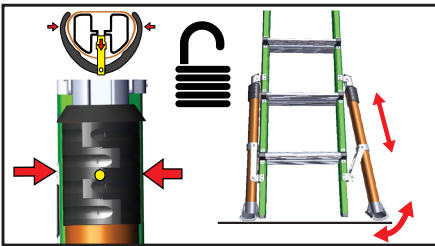

2. Squeeze the release with your fingers. Then, while holding the release in the unlocked position, press down the lock housing and nudge the ladder foot outward.

**ALWAYS MAKE SURE
LOCKING PIN IS FULLY
ENGAGED BEFORE EACH USE.**

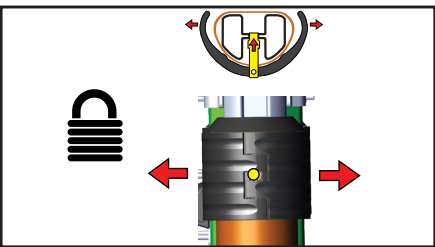


3. When you get the outrigger to the desired position, let go of the release and move the housing slightly until you feel it lock into place. Even when used on level ground, both outriggers should be extended to the first locking position below the storage position for additional stability.

4. To avoid injuries caused by misstepping as you dismount the ladder, it is highly recommended that the outriggers are used for leveling only, and not for gaining additional height. Try to keep the bottom rung height approximately 12" from the ground. Never fully extend both outriggers at the same time. When leveling the ladder, keep one outrigger set in the 1st Use Position, then extend the other until the ladder is level side-to-side.

Advised Use
Positions



Non-Use
Positions

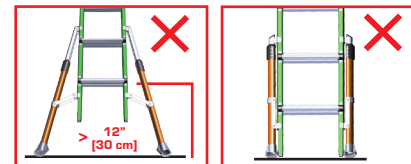

**Use ladder only in advised positions shown.
Use in any other position may result in death or serious injury.**


CONQUEST ALL-TERRAIN™

OUTRIGGER OPERATION AND MAINTENANCE

CONTINUED

Maintenance:

To keep your outriggers operating smoothly, lubricate them with a dry lubricant at least every six months, and prior to long term storage, or more often as use dictates, and under extreme weather conditions.

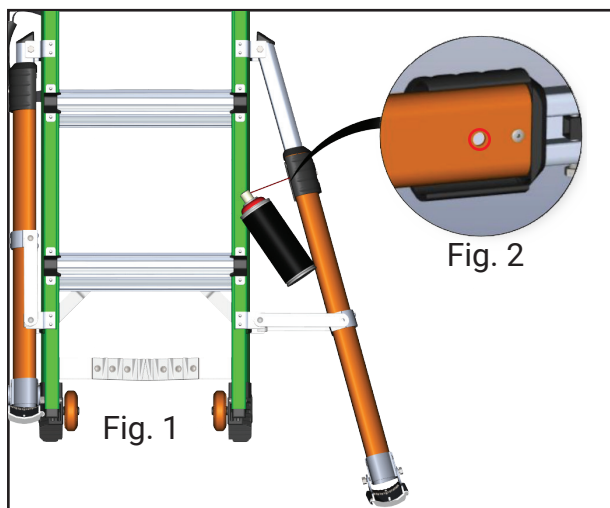

For the following instructions, the ladder can be laying down in storage mode or set up in A-frame configuration.

1. Extend the outrigger as shown in figure 1.
2. Using only a dry lubricant, spray inside the small center hole shown in figure 2.
3. Extend and retract the outrigger a couple times, allowing the lubricant to coat the handle evenly.

Dry lubricant suggesstions: 1. DuPont 2. Tri-Flow 3. B'Laster

WARNINGS

**FAILURE TO OBSERVE THE FOLLOWING MAY RESULT
IN SERIOUS INJURY OR DEATH.**

- Never adjust the outriggers while you are on the ladder.
- Never adjust the outriggers if anyone is on the ladder.
- Always make sure your ladder is level side-to-side before climbing.
- Never release the outriggers if someone is on the ladder.
- Never use the ladder without outriggers deployed.
- Always make sure the locking pins are fully engaged before each use.
- To avoid missteps, keep the bottom rung approx. 12 inches (30 CM) from the ground.

Still need help?

Call our support team at:
800 - 453 - 1192
Monday - Friday 7am - 5pm MST

Or visit us online:
LittleGiantLadders.com

We'd be happy to help!

