



CLIMB ON

SURE-SET™ FEET REPLACEMENT

READ THESE INSTRUCTIONS COMPLETELY BEFORE YOU START. IF YOU DON'T UNDERSTAND THESE INSTRUCTIONS, PLEASE CALL 800-453-1192 FOR ASSISTANCE


Procedure for replacing the SURE-SET™ Feet on Little Giant Ladder Systems **HYPERLITE™** and **HYPERLITE™ SUMOSTANCE®** ladders.

1. Failure to comply with all instructions may result in serious injury.
2. Make sure this kit is compatible with your ladder. Before installing this kit, identify all kit components. If any components are missing, damaged or if you have any questions concerning the use of this kit on Little Giant Ladder Systems products, please contact our Customer Experience Team at 800-453-1192. Do not substitute any components.
3. Inspect the ladder before installing this kit. Repair or replace any damaged or missing parts before using the ladder. Use only Little Giant Ladder Systems repair or replacement parts. If you are unable to repair it, discard the ladder.

COMPONENTS IN KIT




TOOLS NEEDED

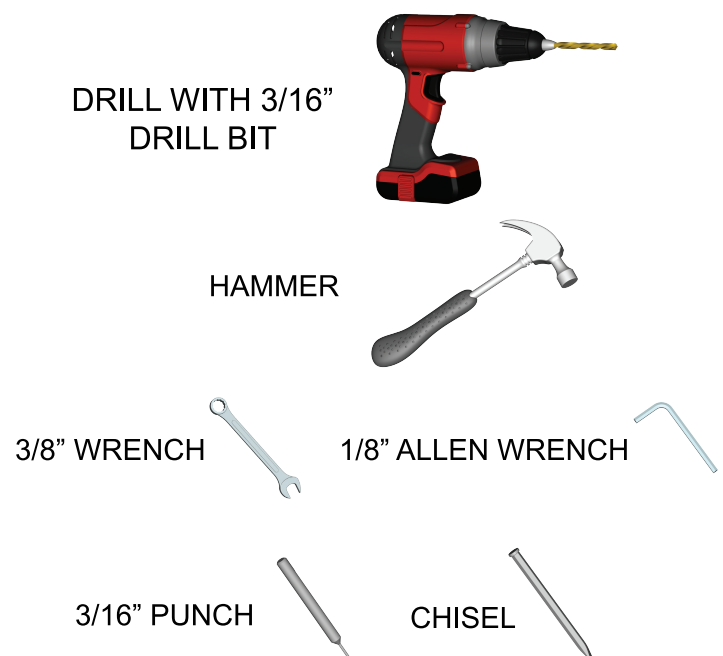


NOTE: IF ANY OTHER PART OF THE LADDER IS DAMAGED BEFORE OR DURING THE PROCESS OF INSTALLING AND/OR REPAIRING, PLEASE CONTACT OUR CUSTOMER EXPERIENCE TEAM FOR ASSISTANCE AT 800-453-1192.


DO NOT USE A DAMAGED LADDER!

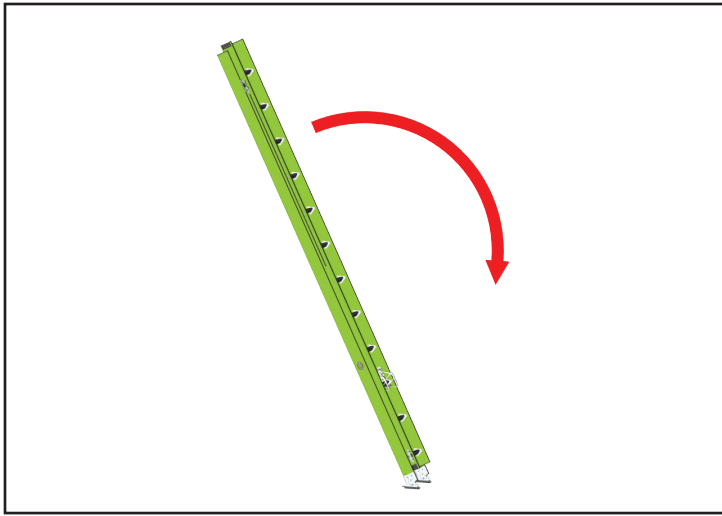


1. Lay the ladder down with the fly section facing the ground.

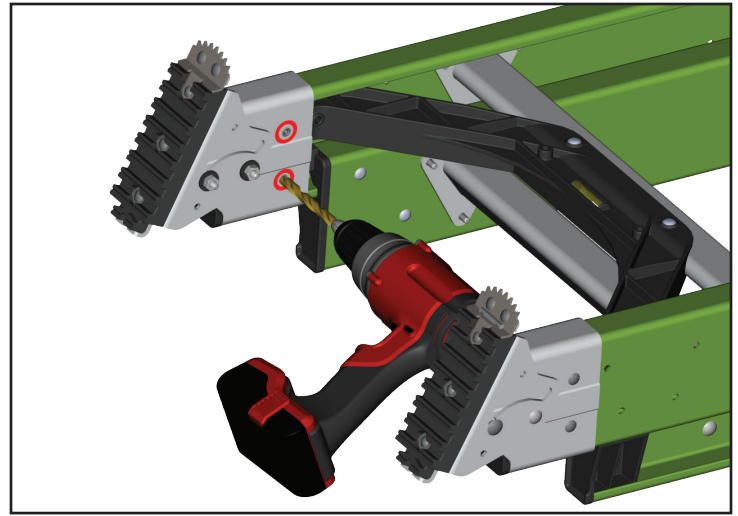


2. Using a drill and 3/16" drill bit, drill through the clinch of the rivets securing the foot bracket, as shown.

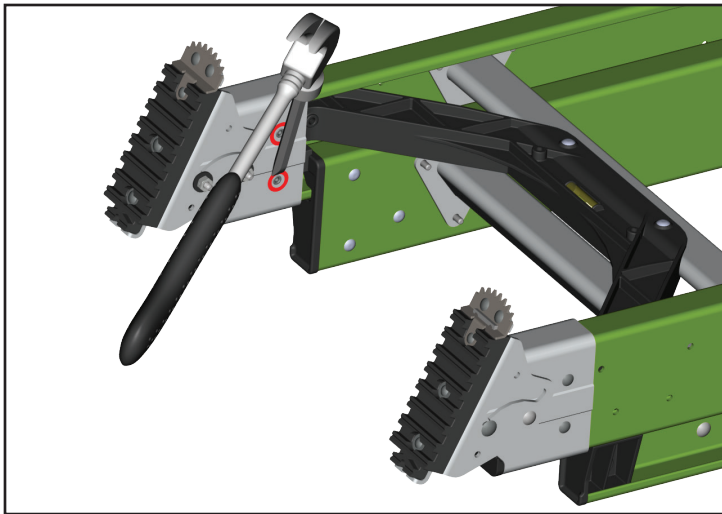


3. If needed, use a hammer and chisel to remove any excess rivet clinch material.

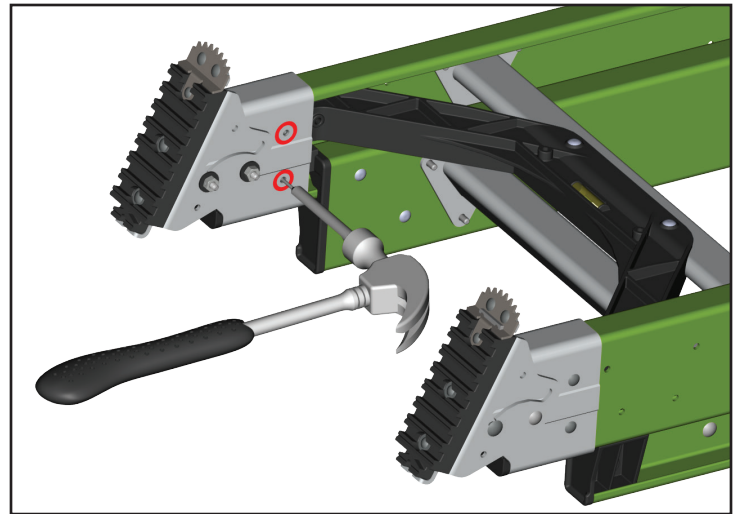


4. Use a hammer and punch to completely remove the rivets.

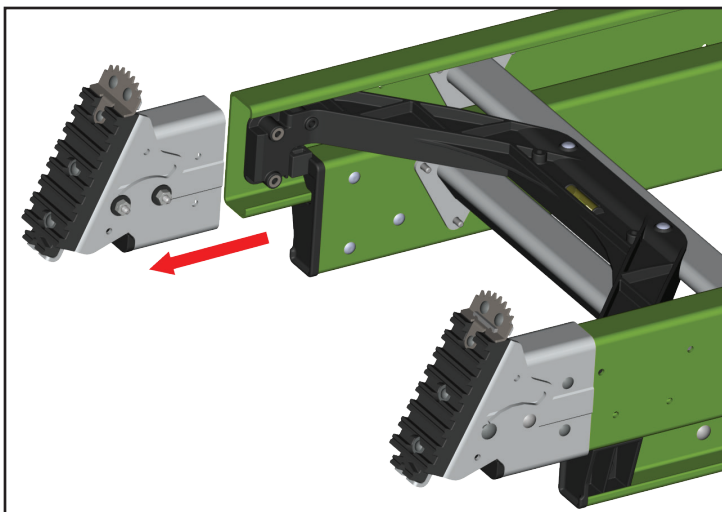


5. Remove and discard the old foot assembly.

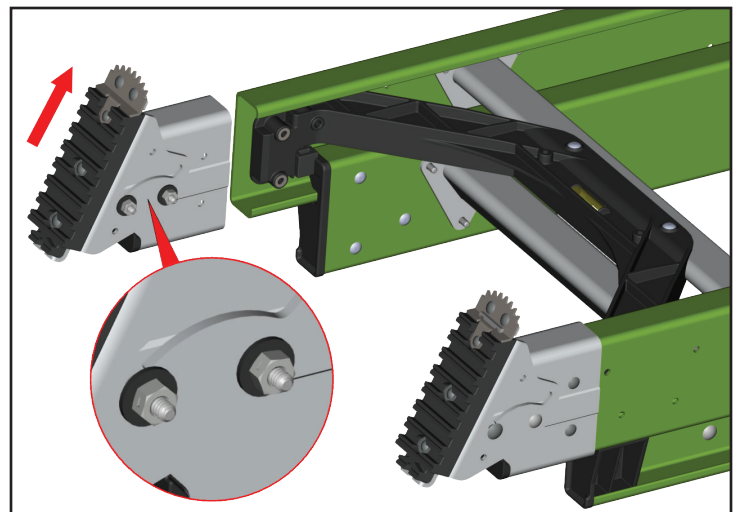


6. Identify the correct replacement foot. The lock nuts on the foot should be facing inward with the pick plate pointing to the back of the ladder.

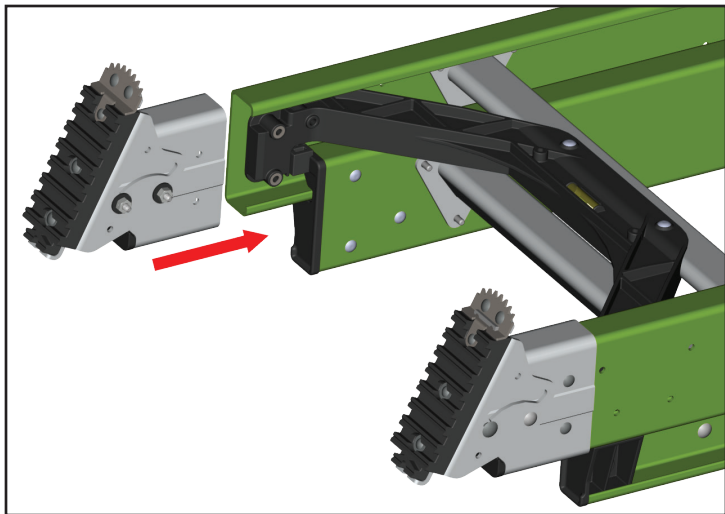

7. Place new foot on ladder and align with holes on leg brace.

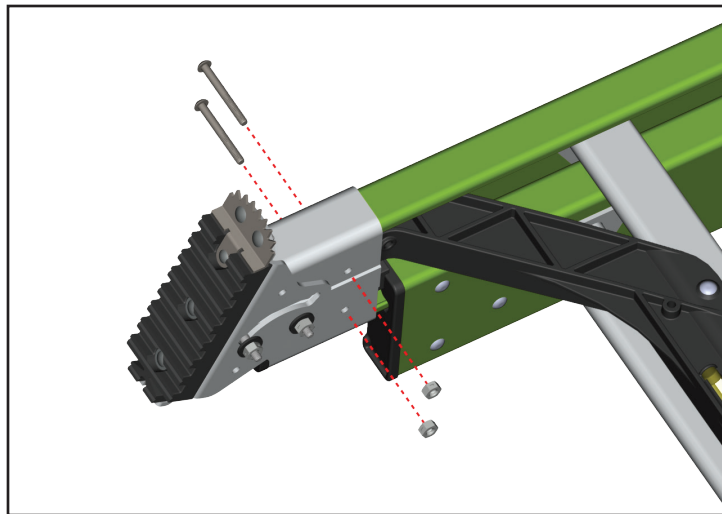

8. Attach and tighten the new hardware as shown with a 1/8" Allen wrench and 3/8" wrench.

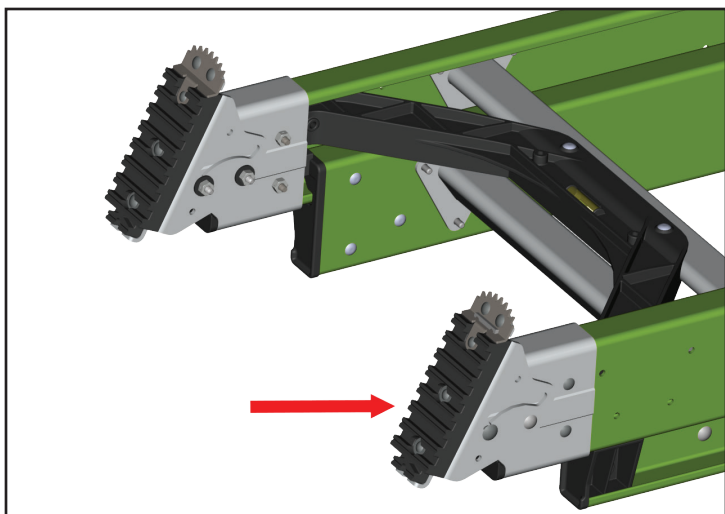

9. Repeat steps 2-8 on opposite foot.



10. Make sure fasteners are secure and both feet function properly before returning ladder to service.