



CLIMB ON

OUTER FOOT REPLACEMENT

READ THESE INSTRUCTIONS COMPLETELY BEFORE YOU START. IF YOU DON'T UNDERSTAND THESE INSTRUCTIONS, PLEASE CALL 800-453-1192 FOR ASSISTANCE

Procedure for replacing the outer foot on Little Giant Ladder Systems **The Cage** ladders.

1. Failure to comply with all instructions may result in serious injury.
2. Make sure this kit is compatible with your ladder. If you have any questions concerning the use of this kit on Little Giant Ladder Systems products, call 800-453-1192 for assistance.
3. Before installing this kit, identify all kit components. If any components are missing or damaged, please contact Customer Care. Do not substitute any components.
4. Inspect the ladder before installing this kit. Repair or replace any damaged or missing ladder parts before using the ladder. Use only Little Giant Ladder Systems repair or replacement parts. If you are unable to repair it, discard the ladder.

COMPONENTS IN KIT



LEFT OUTER FOOT

&

RIGHT OUTER FOOT



TOOLS NEEDED

SCREWDRIVER
*optional



NOTE: IF ANY OTHER PART OF THE LADDER IS DAMAGED BEFORE OR DURING THE PROCESS OF INSTALLING AND/OR REPAIRING, DISCARD THE LADDER OR CONTACT CUSTOMER CARE FOR INSTRUCTIONS.


DO NOT USE A DAMAGED LADDER!




1. Steps 2-5 can be repeated on any of the 4 outer feet.



2. Identify the outer foot that needs to be replaced.

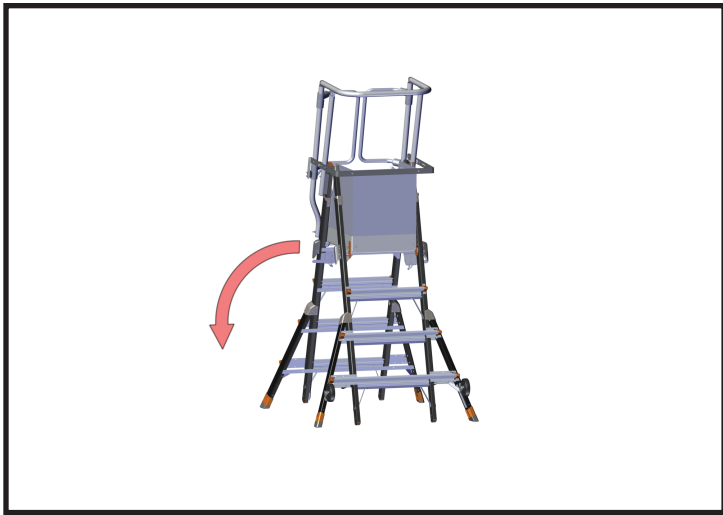


3. Lay the ladder on its side to make the following steps easier.

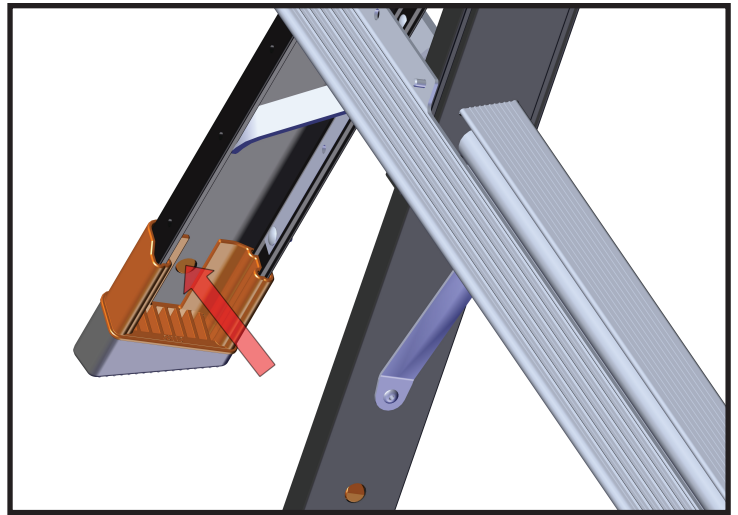

4. Locate the tab on the inside of the leg of the ladder. Press on tab to release the outer foot, if needed, use a screwdriver.



5. Remove the (existing) outer foot, and then discard.

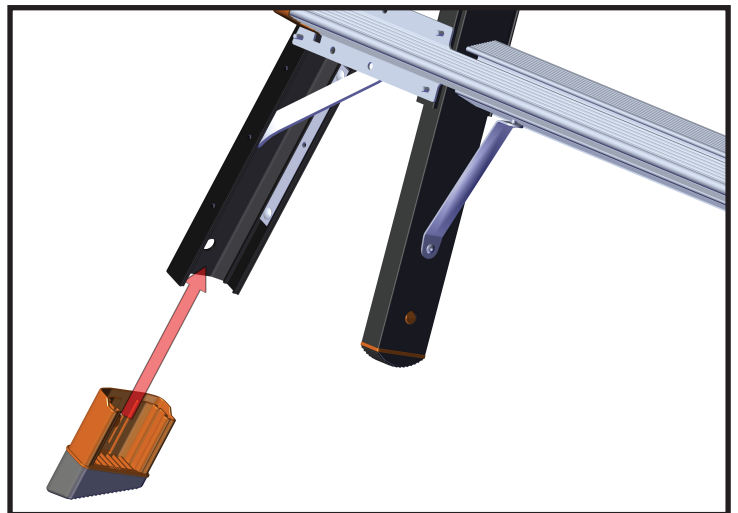

6. Insert the (new) outer foot until you hear the tab click into place.



7. Once all the steps are completed, stand the ladder back up and make sure that it is completely stable before use.