


EXTENSION LADDER WITH CLAW & WALKTHROUGH



How to attach the Walkthrough

At Little Giant we strive to offer the best in customer care. We know that we have a wide variety of quality products, and that sometimes they can be confusing to navigate, but we will always follow up with your call or email in a timely manner with friendly and knowledgeable service.

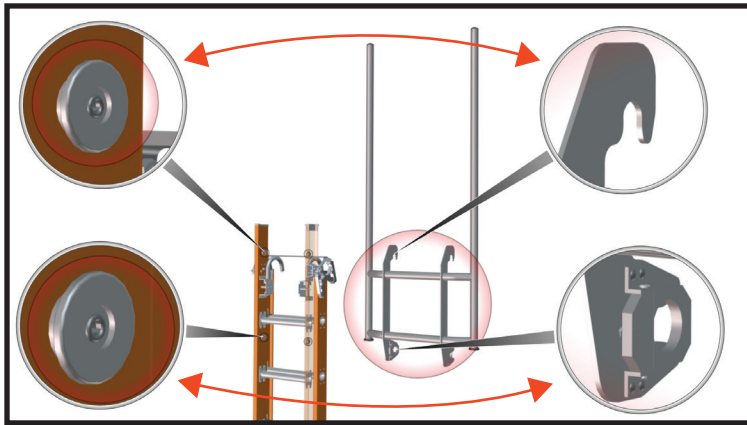


1. Make sure that the hooked ends of the Walkthrough brackets are lined up with the retention posts located on the inside of the ladder rails, and facing toward the climbing side of the ladder, as shown in the illustration.

2. Slip the hooks at the top of the bracket onto the top retention posts. This will act as a pivot point.

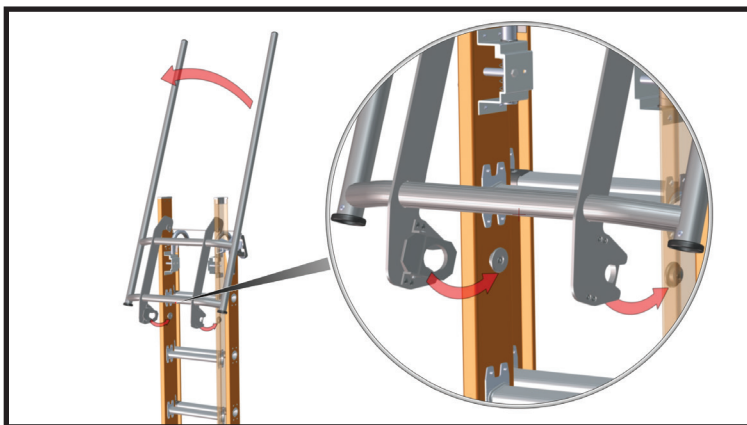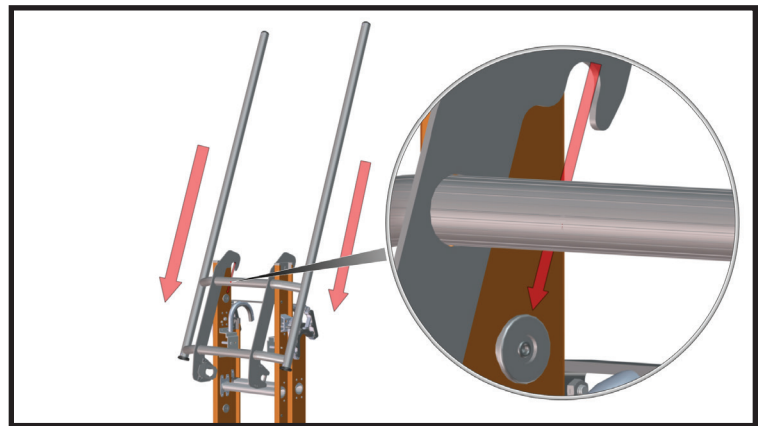



3. Swing the bottom of the bracket into the bottom posts until the latches engage onto the posts.

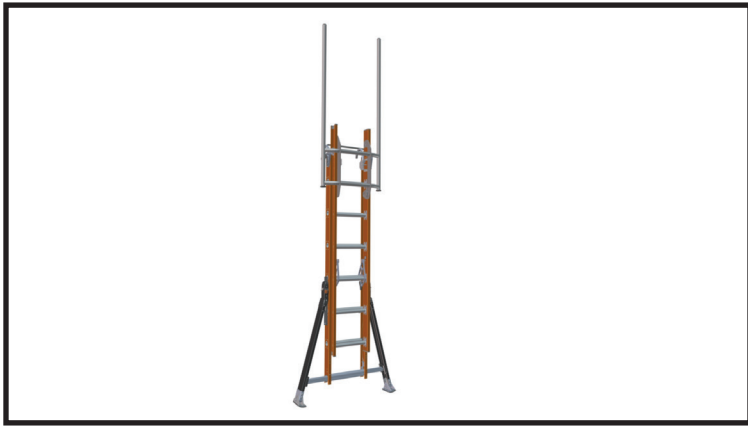

4. Set up your ladder with Walkthrough.


How to use the Walkthrough with (Claw Anchor)


5. Extend your ladder to your desired length.

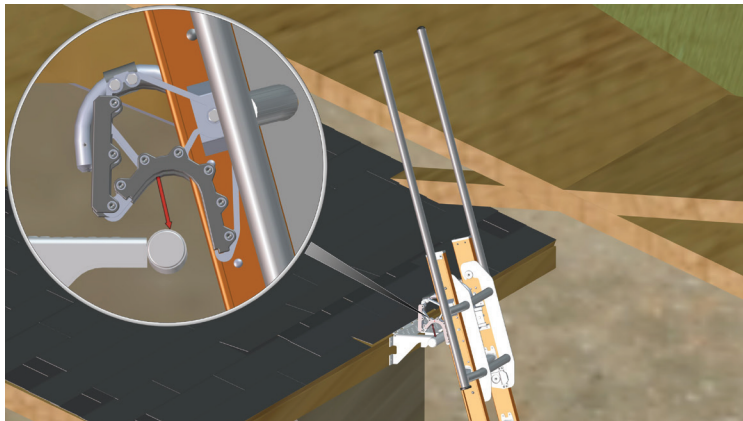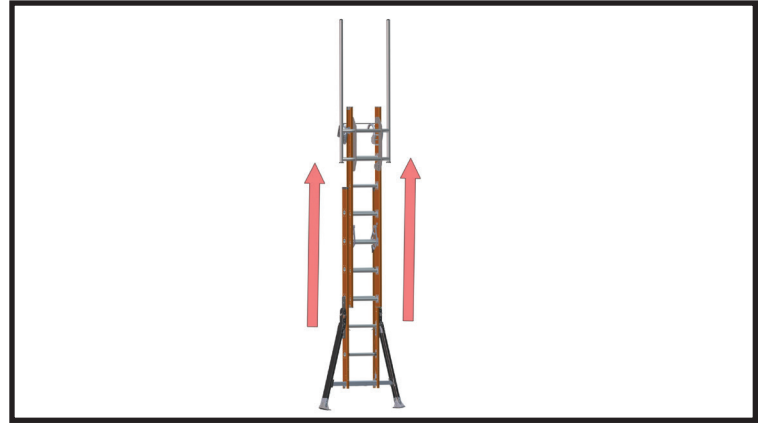


6. Align, and lower the Claw onto the (Ledge Lock)

7. When you lower the Claw onto the (Ledge Lock), it will grip the bar and hold the ladder firmly into place.

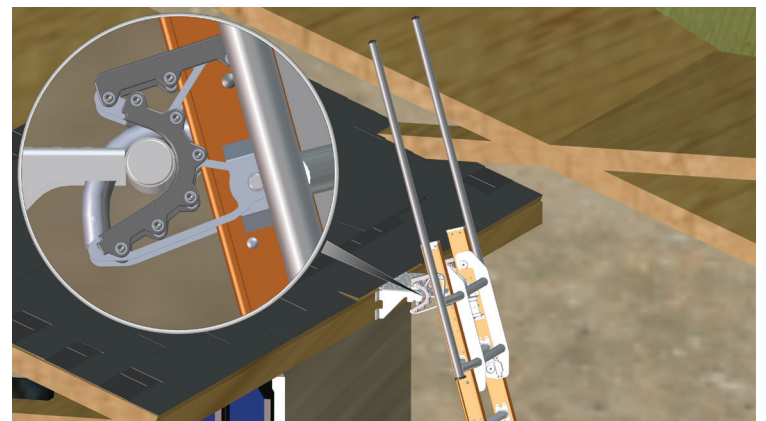


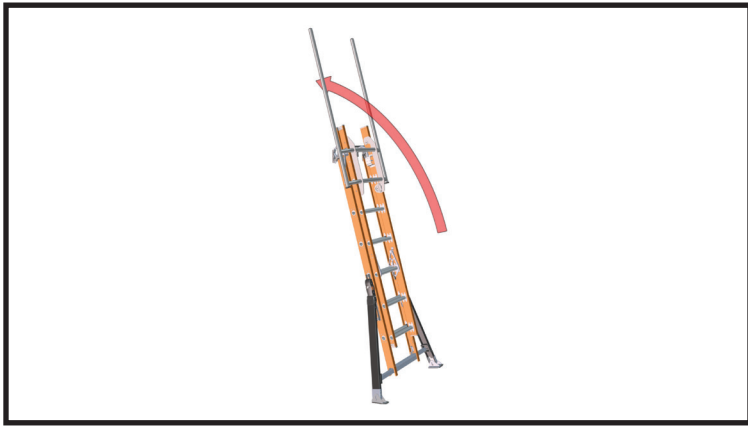


8. Climb up the ladder with Walkthrough.

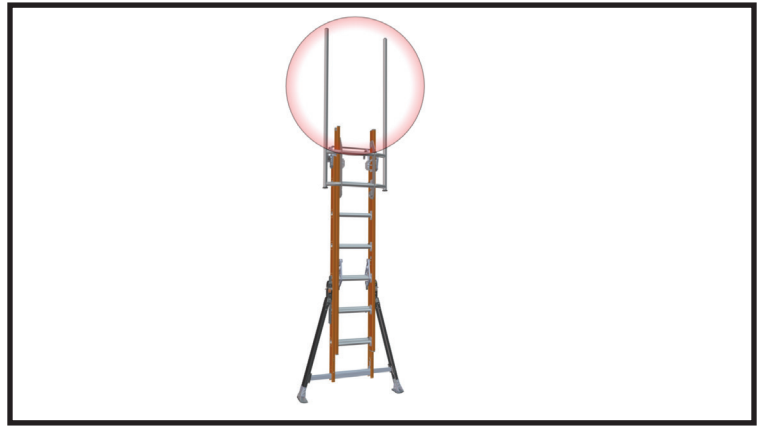


9. When you reach the top of the ladder, place both of your hands on the rails located on either side of the ladder, and walk through.

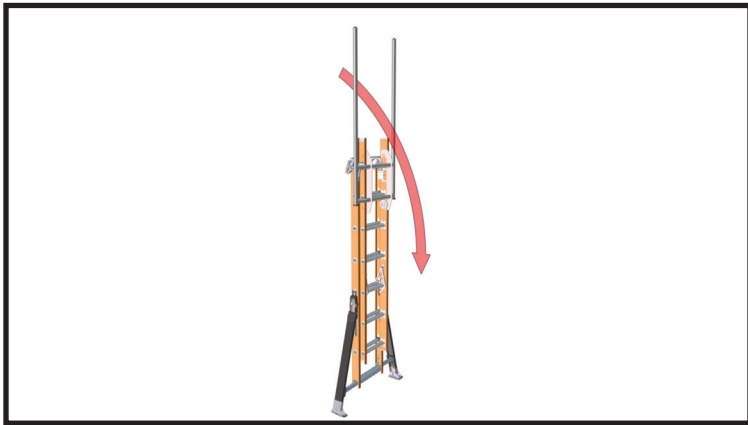

10. To descend, turn so you will be facing the ladder as you descend, place both of your hands on the rails, then descend the ladder. Never climb up or down a ladder facing away from the rungs.

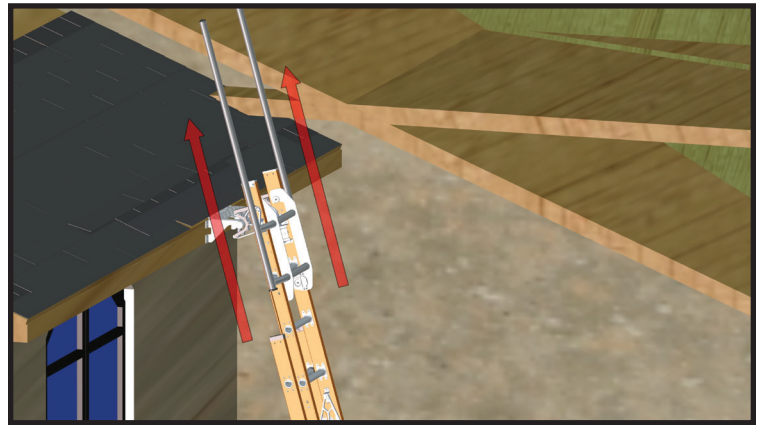


11. Lift up on the ladder to disengage the Claw from the (Ledge Lock).

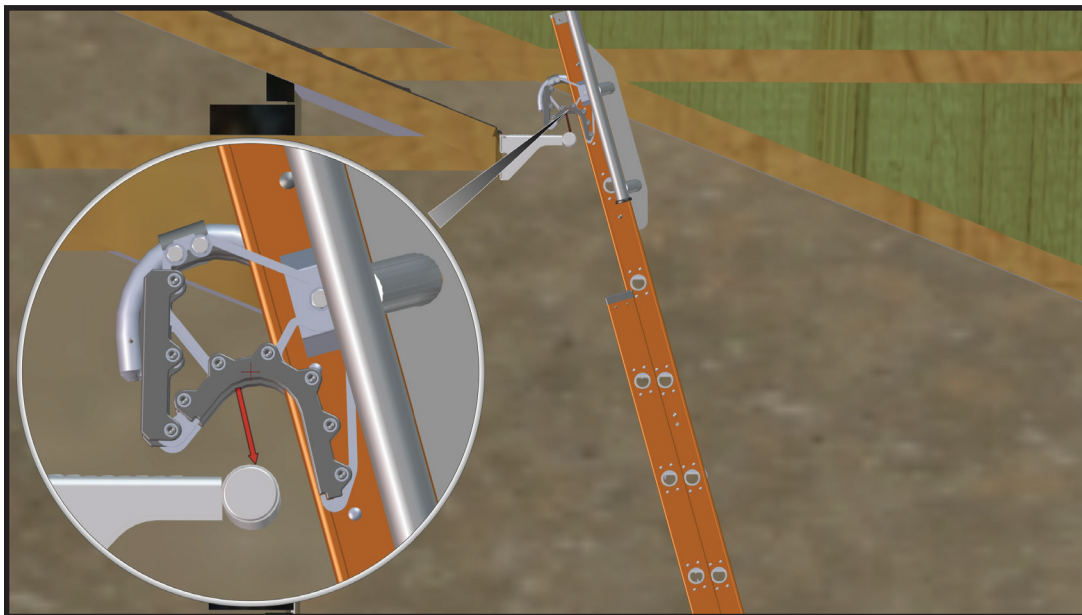



12. Once the ladder is free of the (Ledge Lock), you will be able to raise and lower the height of the ladder freely.

How to detach the Walkthrough

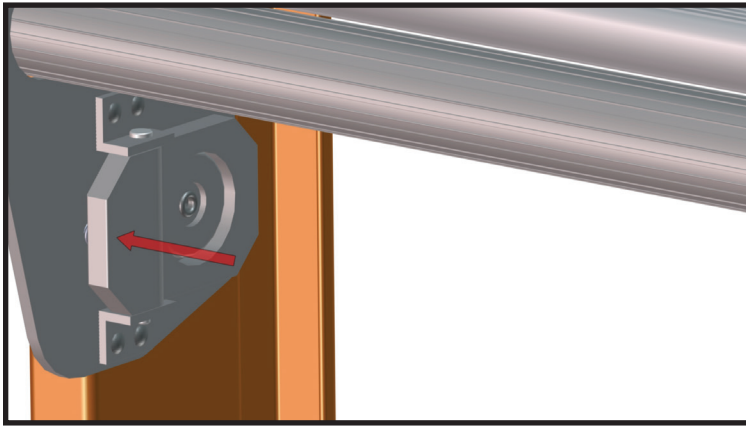

13. Push and hold the end tab on the latch to release the Walkthrough from the ladder.

14. Once the latch releases the Walkthrough, you will be able to swing the Walkthrough back and free of the retention posts.

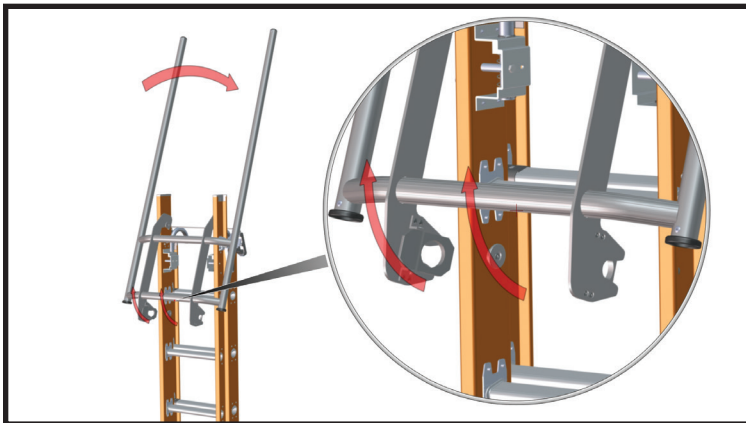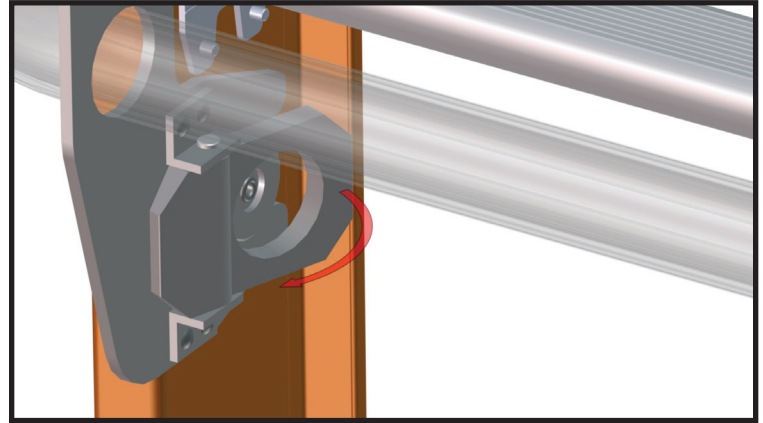

15. Swing the bottom of the bracket away from the ladder.

16. Pull the Walkthrough up completely detaching it from the ladder.

